

Installation instructions

Faucet Aerator - Insert

If your metal aerator housing is in good condition, you can decide to replace the insert only.



1. Simply remove the aerator from your faucet. Use aerator wrench if necessary or a standard wrench (*with cloth over aerator to protect finish*). Clean the threads on the faucet for easier installation.
2. Place the new aerator insert into the original housing.
3. For housing with outside threads, use thicker washer. For housing with inside threads use thinner washer
4. Install onto spout by hand or with wrench. Turn on faucet. If leak occurs, tighten more firmly.

Shower Flow Regular

1. Remove showerhead.
2. Install adapter onto spout by hand. Reconnect showerhead.
3. Turn on shower. If leak occurs, tighten more firmly.



Caché® Hidden Faucet Aerators



1. Simply use the Caché key to remove aerator from your faucet.
2. Clean the threads of the faucet for easier installation.
3. Install the new Caché aerator into faucet with the caché key.
4. Turn on faucet. If leak occurs, tighten more firmly.

Faucet Aerator - Full Assembly

NOTE: A damaged metal housing requires replacement of the entire unit.

- First determine if you need a male or female housing.
- Most faucets are manufactured with a female outlet (threads on the inside), you will need a male aerator.
- If you have a faucet with a male outlet (threads on the outside), you will need a female aerator.
- A great option is the dual thread housing. This fits both male and female faucet outlets.
- Replacement of the entire unit is easy as 1-2-3.



1. Simply remove the aerator from your faucet. Use aerator wrench if necessary or a standard wrench (*with cloth over aerator to protect finish*). Clean the threads of the faucet for easier installation.
2. Install new aerator housing on to faucet by hand or with aerator wrench.
3. Turn on faucet. If leak occurs, tighten more firmly.

Remember: If you are replacing with a dual thread housing, for faucets with outside threads, remove the thicker washer. For faucets with inside threads, leave thicker washer in place.

Faucet Adapter

1. Remove aerator from faucet. If a wrench is necessary, place cloth over aerator to prevent damage.
2. Remove any old washers that might be caught inside the spout.
3. Clean the threads on faucet for easier installation.
4. Install adapter onto spout by hand.
5. Connect your water appliance to the adapter.

